

# OPERATING INSTRUCTION



**IMPORTANT:** PLEASE READ THESE INSTRUCTION CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY. AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE REFERENCE.

**CAUTION:** Do not keep the keys in the safe.

## 1. OPENING THE SAFE

To open the door of the safe for the first time: Press 1,5,9 (this is the preset numbers when the safe leaves the factory) and confirm by pressing the letter "A". You will hear a beep and the green light will be on, then open the door using the knob within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 seconds before reattempting.

If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

## 2. PROGRAMMING THE CODE

- A. Press the red button "X" (see diagram 1) on the back of the door near the hinge, release it and you will hear two beeps.
- B. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter "B" within 15 seconds. Or you have to do from the beginning.
- C. Write down your new combination immediately and check whether your new combination has been programmed or not on conditions of the safe door open.

## 3. BATTERY REPLACEMENT WARNING

If the batteries are low, the red light (in the left) will warn you immediately. To test the batteries, just input your personal numbers to open the door. If the batteries are low, the red light will be on. If nothing happens, it means that the batteries are in order.

#### 4. REPLACING THE BATTERIES

The safe requires 4 X size "AA" (1.5V R06) batteries.

Open the safe, push the battery cover plate "Y" (see diagram 1) on the back of the door and replace the 4 P CS old batteries. You must reprogram the code, using the above third step.

Use of alkaline batteries is recommended.

#### 5. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the small central plate "Z" (see diagram 2) on the front panel, insert the key into the keyhole and turn it in a counter-clockwise direction, then turn the knob in a clockwise direction towards the right. This will manually open your safe at any time.

#### 6. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are two holes (diameter 8mm) both in the bottom and on the back; therefore it can be fixed by the expansion bolts supplied.

#### CAUTION:

The safe should be placed horizontally when installing the safe.

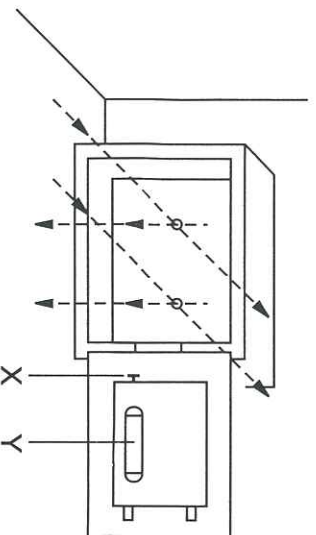


Diagram 1

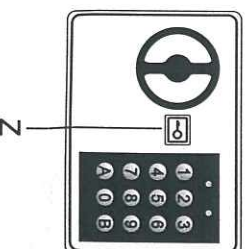


Diagram 2