

# Securefast

## QUICK START GUIDE

**Deedlock AKT 4223 Proximity Kit  
999 user, reader with separate controller**

**Revised July 2018**

For further assistance please contact:  
Securefast: 01704 502815  
www.securefast.co.uk  
sales@securefast.co.uk.

## Installation

### Step 1


Mount the reader using the drilling stencil in the user manual.

### Step 2

Mount the controller/power supply inside the building.

### Step 3

Shown below is the pre-wired configuration of the controller. Please note that all these connections must remain in place. If you have any problems with the unit please verify all these connections before contacting technical support.

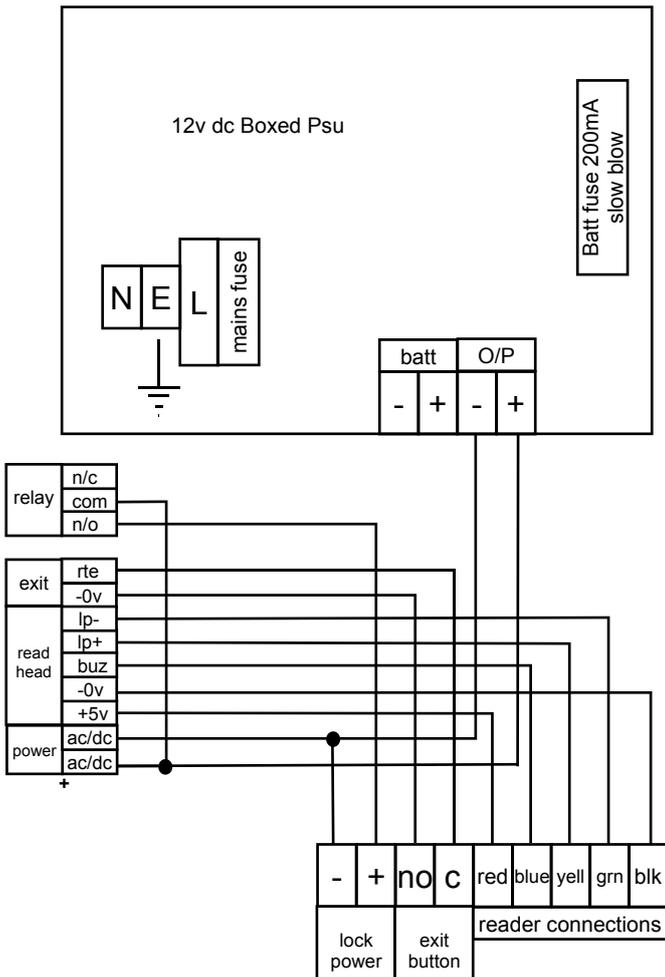

## Connection

### Step 4


Connect the reader to the terminal block as shown below.

### Step 5

Connect the Exit button (if used) as shown below. The exit button must be a normally open momentary design.

### Step 6

Connect the fail secure lock release as shown below. Please note that should you wish to use a fail safe locking device you should contact us for assistance..

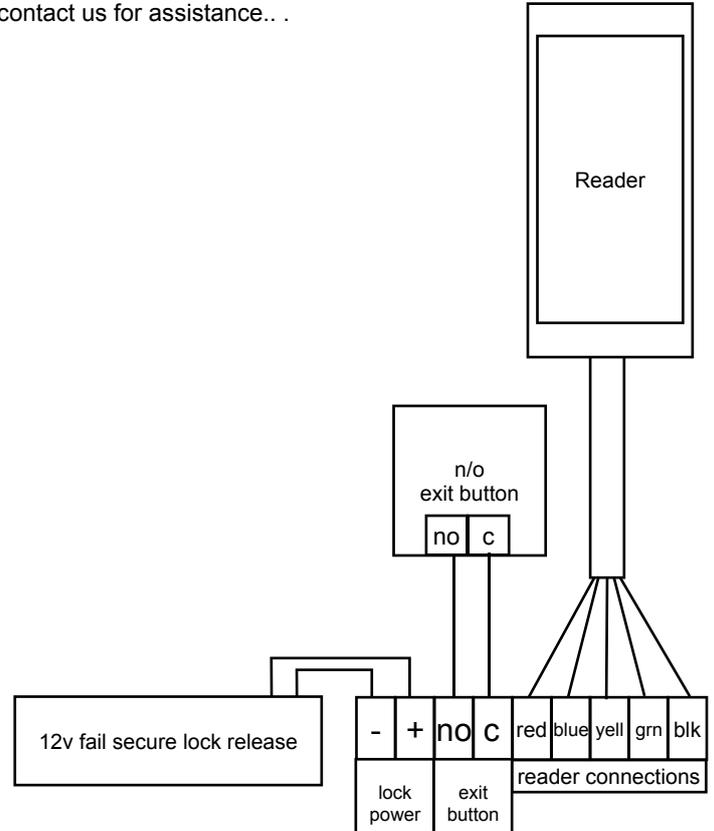

## Programming

### Step 7

Power up the unit, verify a green light on the power supply and an orange light on the reader.

### Step 8 - to define a master tag

Press and hold the upper button. Whilst holding this also press the lower button. Listen for 3 beeps. Now release the buttons and present a tag to the reader. Listen for 3 beeps. This is now the Master tag, used to add user tags.

### Step 9 - adding user tags

Present the Master tag to the reader for more than 3 seconds. Listen for an initial beep followed by 3 more. Remove master tag and present a new user tag. Listen for a single beep. tag is now enrolled, to add more tags simply present them to the reader one at a time and wait for the confirming beep each time. When finished adding tags present the master tag again. Listen for 3 beeps.

Note: the number associated with the tag can be displayed on the controller by presenting the tag to the reader. It is recommended to keep a list of which tag is issued to which person.

For all other programming information please see the User Manual.

## Using the system

Present a valid user tag to the reader. The reader light will turn from orange to green and the door will be released. After use the reader light returns to orange.

Tel: +44(0)1704 502815  
email: techsupport@securefast.co.uk

fax: +44 (0)1704 502810  
or visit www.securefast.co.uk