

UBH1RF

Radio-Interlinked Heat Alarm

UltraFire

USER MANUAL

UBH1RF HEAT ALARM
WITH RADIO-INTERLINK



Index

| | |
|---------------------------------------|-------|
| Overview..... | 1 |
| Product Specification..... | 2 |
| Suitability..... | 3 |
| Silence / Do Not Disturb Mode..... | 4 |
| Alarm Signals..... | 5 |
| Status Indicators / Installation..... | 6 |
| Placement..... | 7 |
| Installation Procedure..... | 8 |
| Radio-Interlink..... | 9 |
| Interlink - User Guide..... | 10/11 |
| Interlink - Clear Interlink Code..... | 12 |
| Maintenance..... | 13/14 |
| Troubleshooting..... | 15 |
| Fire Safety Advice..... | 16 |
| What to Do in Case of Fire..... | 17 |
| Warranty Information..... | 18/19 |
| Contact Information..... | 20 |

Overview

This heat alarm is a fire detection and alarm device which gives off an audible and visual warning when the ambient temperature reaches 54°C to 70°C. These temperatures are abnormal in a typical setting and thus are likely to be caused by an actual fire. Heat alarms are ideal for areas with a risk of fire but where traditional smoke alarms would experience regular false alarms, such as in kitchens and garages. A heat alarm is not suitable for bathrooms and other excessively humid rooms.



During standby, the LED will flash every 32 seconds to indicate normal operation. When in alarm mode the LED flashes approximately once per second and the alarm enters into one of the alarm patterns described in the Alarm Signals section.

Product Specification

- **Sensor Type:** Fixed Temperature
- **Class:** A2 (Trigger Temperature 54°C – 70°C)
- **Battery Specification:**
 - **Voltage:** DC 3V
 - **Type:** 2x AA alkaline
 - **Recommended:**
 - Gold Peak Group GP 15A
- **Dimensions (HxDia):** 40x102mm
- **General Operating Temperature:**
4°C - 38°C
- **Humidity Range:** 10% to 95% RH
- **Operating Current:**
 - **Standby:** <50µA
 - **Alarm:** <90mA
- **Alarm Volume:** >85dBA at 3 metres
- **Heat Sensitivity:** 54°C - 70°C
- **Silence Time:** Approx. 10 minutes
- **Do Not Disturb Time:**
Approx. 8-10 hours (see Additional Features)
- **Wireless Frequency:** 868MHz
- **Wireless Range:**
 - **Clear Line of Sight:** 200m
 - **Typical Indoors:** 35m
- **Wireless Limit:** 50 devices
- **Useable Lifespan:** 10 years
- **Disposal:** Not for general waste; see local electronic waste disposal guidelines.
- **Suitable for:** BS 5839-6 Grade F2

Suitability

UltraFire's range of battery-powered fire detection and alarm devices are designed to meet BS 5839-6 Grade F2 requirements. Even if interlinked as a network with multiple sensor types, these alarms are only intended for use in single household premises which are permitted to use battery-powered alarms.

Local Building Regulations, legislation, or other requirements may specify mains-powered alarms, in which case this product is not suitable.

Multi-household domestic premises and commercial premises usually require more advanced fire detection and alarm systems.

Alarm Silence Mode

WARNING: Before silencing an active alarm you must ensure the environment is safe. Do not silence the alarm in the event of an actual fire, as this may prevent other occupants from evacuating.

When in alarm mode, pushing the test button will silence the unit for approximately 10 minutes. The red LED will flash as per the Status Indicators section to indicate that the alarm has been silenced.

The alarm will automatically reset after approximately 10 minutes. If after this period there are still signs of a potential fire then the alarm will sound again. The alarm silence mode can be repeated.

Do Not Disturb Mode

When the alarm is indicating any kind of fault it will chirp as per the Status Indicators section. Pressing the silence button at this time will silence the warning for approximately 8 to 10 hours, ideal for postponing corrective action overnight.

The alarm will still continue to monitor for signs of a potential fire during this time, providing the fault does not prevent normal operation, so it may go into alarm mode. The alarm's Do Not Disturb Mode only prevents the fault warning chirp.

Alarm Signals

Test Alarm Pattern



1. Chirp 3 times with red LED flash



2. Pause 1.5s



3. Repeat from the beginning

Heat Detected Alarm Pattern



1. Chirp 3 times with red LED flash



2. Pause 1.5s



3. Chirp 3 times with red LED flash



3. Repeat from the beginning

Wireless Alarm Pattern



1. Chirp 2 times with red LED flash



2. Pause 1.2s



3. Repeat from the beginning



4. The alarm will reset after 60 seconds without further wireless activation signal from other alarms

Status Indicators

- During standby operation the red LED will flash once every 32 seconds.
- When the battery fails or a low battery is detected, the alarm will chirp once every 32 seconds in conjunction with the red LED flashing.
- When a fault is detected the alarm will chirp once every 32 seconds with red LED flash.
- If the alarm has been silenced, the red LED will flash once every 8 seconds for approximately 10 minutes.

Installation

Location



Heat alarms are recommended for kitchens, generator rooms, garages, utility rooms, loft spaces, or other rooms which typically suffer false alarms.

Do Not Install in the Following Places:

- On walls, shelves, or cupboards
- Where the alarm is likely to be exposed to liquids
- At the very apex of pitched ceilings
- In the corner of the ceiling
- Within 30cm of a wall, light fitting, or other obstruction
- In bathrooms and other rooms that will be exposed to steam
- Where the ambient temperature regularly exceeds 4°C to 38°C range

Placement

UltraFire Wireless Heat Alarms **must** be installed on the ceiling, at least 30cm from the nearest wall, light fitting, or other obstruction.

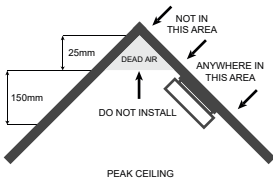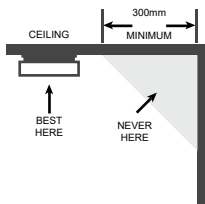


 
 
These alarms should be installed no more than 150mm vertically below the apex of a pitched ceiling. Where the depth from apex to eaves is 600mm or less the ceiling should be treated as flat.

Try to ensure that the alarm is within reach without taking any undue risks, so that you can perform routine maintenance and replace the batteries.

Above all else you must ensure that you follow local building regulations, legislation, and official standards.

Installation Procedure

WARNING: The label on the alarm must not be removed as it shows important information about the product.

1. Check the desired installation position for wires, pipes or other obstructions that would be dangerous to drill into.
2. Hold the baseplate against the ceiling at the desired installation position. 
3. Mark the installation holes with a pencil.
4. Drill the two installation holes as previously marked using a 5mm diameter drill bit.
5. Strike the two included plastic rawl plugs into the holes with a hammer.
6. Align the baseplate to the plastic rawl plugs and fix in place using the provided screws. 
7. Fit the batteries into the alarm (please note the battery polarities).
8. Follow the instructions in the radio-Interlink section.
9. Line the alarm up to the baseplate and turn the alarm head clockwise, until securely attached.
10. After mounting, test the alarm as described in the Maintenance section. 

Radio-Interlink

UltraFire radio-interlinked alarms are designed to be wirelessly interlinked as a network with up to 50 products. These alarms need to be “learned in” or interlinked in order to communicate with each other. If one alarm activates, all other interlinked alarms will also sound. They are not designed to communicate with wireless alarms from other ranges or manufacturers.

Note: Obstructions such as steel reinforcement in concrete could block or impede the wireless signal. While the wireless range is over 200m in open spaces, the effective range may be reduced by walls and other obstructions within a building. It is recommended not to exceed 35m as the maximum distance between the alarms in a network.

Interlink - User Guide

1. Ensure all alarms have batteries fitted and are turned on
2. Pick one alarm to be the Master unit; mark this alarm for future reference
3. On the Master unit, press the test button 3 times in quick succession
 - a. The red light should be on continuously
 - b. Master mode will time out in 10 seconds if no other alarms attempt a connection
4. On all other alarms, one at a time, press the test button 3 times in quick succession
 - a. If successful the red light on each alarm should flash rapidly for a short period of time
 - b. If not successful try again
5. Once all other alarms are connected the Master unit can be put into normal operation
 - a. Either wait 10 seconds or press the test button once

Interlink - User Guide

6. When all alarms are connected and in normal operation the system should be tested:
 - a. Pick one alarm and hold the test button; this one should sound almost immediately
 - b. Continue holding the test button until the other alarms start sounding
 - c. It may take approximately 30 - 45 seconds for all alarms to sound
 - d. If any alarms do not sound, put the marked alarm back into Master mode (steps 2 & 3) and try to reconnect the silent alarm(s) according to steps 4 & 5

Clear Interlink Code

It may be necessary to remove an alarm from the network in some situations, for example if troubleshooting an alarm that does not respond to the test signal.

1. Turn the alarm head anti-clockwise and remove it from the baseplate.
2. Take the batteries out from the battery compartment.
3. Press and hold the test button while reinserting the batteries. If successful, the red LED will turn on for about 3 seconds, otherwise repeat accordingly.
4. Once the LED turns off, release the test button.
5. Press and release the test button again when the LED turns back on.
6. The LED will turn off and the alarm will chirp, indicating success.
7. The alarm is now in standby operation as a standalone unit, no longer interlinked with any other alarms.

Maintenance

Testing

Test your alarms to ensure proper operation once per week by pressing the test button. If there is no sound output it means that the alarm is faulty, the batteries are flat, or that the installation procedure may not have been followed correctly. Please try replacing the batteries and reinstalling the alarm head. If the alarm still fails to react to the test button, please read the Troubleshooting section of this manual.

WARNING: The test button accurately tests the alarm's components and functions. Do not expose the alarm to an open flame. You may contaminate and damage the sensor, preventing the alarm from providing adequate protection from real fires, and invalidate the warranty.

Note: When testing a single alarm, because the alarm transmits a wireless signal, other connected alarms should also sound. You may need to hold the test button for up to 30 seconds for the alarm to sound. Once the test button has been released, the other alarms will silence within 1 minute.

Repairing

Do not attempt to repair the alarm yourself; dismantling the alarm will affect your warranty. If the alarm is not operating properly, and it is still under warranty, contact the retailer who sold you the product or the manufacturer.

Maintenance

Cleaning

Do not paint smoke or heat alarms. Your alarms should be cleaned every month, using a vacuum cleaner fitted with the soft brush attachment.

WARNING: Do not attempt to remove the cover to clean inside. This will affect the warranty.

Battery Replacement

1. Twist the alarm anti-clockwise to remove it from the baseplate.
2. Remove the old battery.
3. Connect and insert a new battery, ensuring correct polarity.
4. Place the alarm back on the baseplate, twisting clockwise.
5. Hold the test button until the test pattern sounds. This may take 5 - 10 seconds.
6. See the Troubleshooting section if the alarm does not sound.

Troubleshooting

| Problem | Action |
|---|--|
| Alarm does not sound when tested. | Remove alarm head from baseplate. Check batteries are installed properly and have power. |
| Alarm chirps with the red LED flash about every 32 seconds. | Replace batteries as described in the Maintenance section. Please note the battery polarities. |
| Heat alarm sounds unwanted alarm intermittently. | <ol style="list-style-type: none">1. Problems caused by high humidity can be resolved by drying the alarm head.2. Move the alarm to a new position in the room. |
| Heat alarm fails to interlink to a network. | Follow the steps to clear the interlink code and try to interlink the alarm again using a different alarm as the master. |

Fire Safety Advice

Familiarise yourself with and follow the national and local regulations regarding selection and installation of the different kinds of smoke and heat alarms.

Plan Your Escape

If an alarm sounds but you did not push the test button and it is not a fault tone then it is likely a dangerous situation has developed in the property. To prepare for such occurrences, it is recommended that you develop escape plans for the premises and discuss them with all occupants. Regular practice of your emergency plans can be vital to a successful evacuation.

1. Familiarise everyone with the alarm patterns of all alarm devices and explain what they represent.
2. Identify all exits from each room and plan an escape route to the outside from each exit.
3. Teach all occupants to carefully touch doors and to use alternate exit when the door is hot; instruct them not to open the door if the door is hot.
4. Teach occupants to crawl along the floor, to stay below dangerous fumes and gases.
5. Identify a safe meeting place for all occupants outside the building and make sure everyone is aware of it.

What to Do in Case of Fire

1. Calmly leave the premises as quickly as possible. Follow your personalised Escape Plan if possible; otherwise:
 - a. Carefully touch doors to ensure they are not hot before opening them.
 - b. Use an alternate exit if necessary.
 - c. Crawl along the floor to avoid smoke.
 - d. Do not stop to collect anything.
2. Meet at a pre-arranged meeting place outside the building if there are multiple occupants. Check if anyone is missing, but do not re-enter the premises.
3. Call the fire service from outside the building; do not delay your escape to contact the emergency services.
4. Do not go back inside a burning building for any reason. Wait for the fire service to arrive.

NOTE: These guidelines will assist you in the event of a fire; however, UltraFire cannot predict the exact situation of any home fire. Creating your own escape plan based on your specific premises and occupants is the best way to ensure safe evacuation. Follow fire safety guidance and legislation to reduce the chance that fires will start and prevent hazardous situations.

Warranty Information

Safelincs warrants to the original purchaser that its enclosed UBH1RF battery-powered radio-interlinked alarm, under normal domestic use and service, will operate as described and be free from material and workmanship defects for a period of five years from the date of purchase.

Safelincs hereby warrants that during the warranty period, commencing from the date of purchase, Safelincs, at its discretion, agrees to repair or replace the unit free of charge. The warranty on any replacement alarm will last for the remainder of the period of the original warranty in respect of the alarm originally purchased – that is from the date of original purchase and not from the date of receipt of the replacement product.

Safelincs reserves the right to offer an alternative product similar to that being replaced if the original model is no longer available or in stock. This warranty applies to the original retail purchaser from the date of original retail purchase and is not transferable. Proof of purchase is required.

This warranty does not cover damage resulting from accidents, misuse, abuse, disassembly, lack of reasonable care of the product, or applications not in accordance with the user manual. Consumables such as batteries are also not covered by this warranty. In no case shall Safelincs be liable for any incidental or consequential damages or any other warranty, express or implied.

The warranty does not apply to retail stores, service centres or any distributors or agents. Safelincs will not recognise any changes to this warranty by third parties. Except to the extent prohibited by applicable law, any implied warranty of fitness for a particular purpose is limited in duration for five years.

This warranty does not affect your statutory rights. Except for death or personal injury, Safelincs shall not be liable for any loss of use, damage, cost or expense relating to this product or for any indirect, or consequential loss, damages or costs incurred by you or any other user of this product.

Returning Your Alarm

Contact either the original retailer or UltraFire before attempting to return your alarm. Pack the alarm in a well-padded box, tape securely and affix an appropriate address label. Send the alarm either to the retailer you purchased from or to the manufacturer if still under warranty.

If the alarm is no longer under warranty, replace it immediately with a comparable product. If your current alarms are interlinked only replace with UltraFire alarms from the same model range to ensure compatibility and optimal performance.

UltraFire



33 West Street, Alford, LN13 9FX



0800 978 8262



support@ultra-fire.co.uk



www.ultra-fire.co.uk

© 2020 Safelincs All Rights Reserved

DOC 1237 Version 2.0