

EXITGUARD EX204 EX205 EX206 User instructions

Enter User Code. You now have 5 secs to change modes.
LEDs indicate the current mode.



User Functions

- 0** - To turn EXITGUARD to OFF mode
 - 1** - To arm EXITGUARD in CHIME mode
 - 2** - To arm EXITGUARD in KEYPAD RESET mode
 - 3** - To arm EXITGUARD in AUTO RE-ARM mode
- Advance User Set Up Functions



Give this number to staff who are allowed to arm or turn the EXITGUARD to OFF

7 Press and hold 7 for SET-UP mode.

If the SET-UP LED flashes then use only the codes below:-

If the SET-UP LED is steady enter the manager code MMMM.

The SET-UP LED will then flash then use only the codes below:-

Advanced User Functions

Escape from SET-UP mode and leave in the OFF mode



To change user code



Give this number to staff cleared to arm/disarm EXITGUARD

Add/change optional pass code.

Allows passage through a door without the need to turn OFF and re-arm. Return passage is allowed using a pushbutton. Pass time is set by DOTL times.



Give this number to staff cleared to pass



To remove optional pass code change to User code UUUU.



Note: DOTL times remain as already programmed.

Add or change optional manager code. To use the manager code you must use the User code first as explained above.



Restrict this number to security cleared staff

Adding a manager code restricts the ability of users to change various parameters to try and breach security.

To remove optional manager code (change to user code UUUU)



Escape from SET-UP mode and leave in the OFF mode

