


Setting the address

1. Select a zone and address for each sounder.
2. Each sounder must have a Unique address
3. Set the address switch as shown in the table.

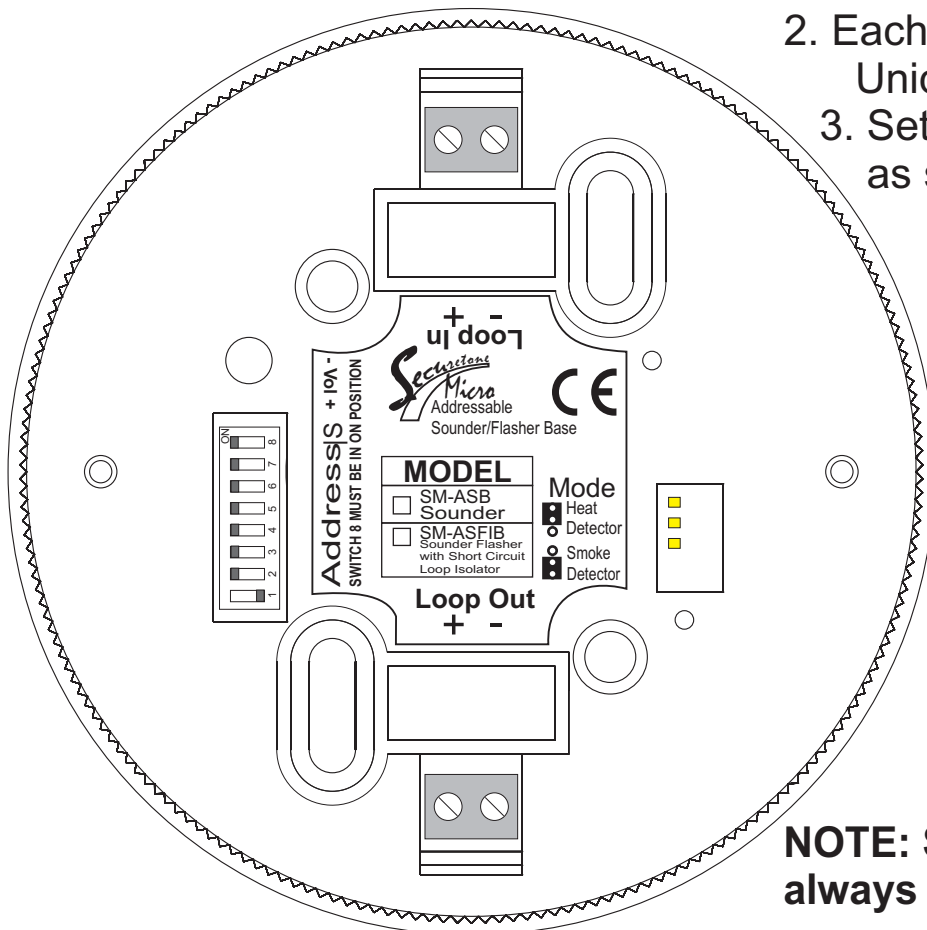

NOTE: Switch 8 must always be in the ON position

ADDR	SWITCHES							ADDR	SWITCHES								
	1	2	3	4	5	6	7		1	2	3	4	5	6	7		
0	=	n	o	t	u	s	e	d	17	=	OFF	ON	ON	ON	OFF	ON	ON
1	=	OFF	ON	ON	ON	ON	ON	ON	18	=	ON	OFF	ON	ON	OFF	ON	ON
2	=	ON	OFF	ON	ON	ON	ON	ON	19	=	OFF	OFF	ON	ON	OFF	ON	ON
3	=	OFF	OFF	ON	ON	ON	ON	ON	20	=	ON	ON	OFF	ON	OFF	ON	ON
4	=	ON	ON	OFF	ON	ON	ON	ON	21	=	OFF	ON	OFF	ON	OFF	ON	ON
5	=	OFF	ON	OFF	ON	ON	ON	ON	22	=	ON	OFF	OFF	ON	OFF	ON	ON
6	=	ON	OFF	OFF	ON	ON	ON	ON	23	=	OFF	OFF	OFF	ON	OFF	ON	ON
7	=	OFF	OFF	OFF	ON	ON	ON	ON	24	=	ON	ON	ON	OFF	OFF	ON	ON
8	=	ON	ON	ON	OFF	ON	ON	ON	25	=	OFF	ON	ON	OFF	OFF	ON	ON
9	=	OFF	ON	ON	OFF	ON	ON	ON	26	=	ON	OFF	ON	OFF	OFF	ON	ON
10	=	ON	OFF	ON	OFF	ON	ON	ON	27	=	OFF	OFF	ON	OFF	OFF	ON	ON
11	=	OFF	OFF	ON	OFF	ON	ON	ON	28	=	ON	ON	OFF	OFF	OFF	ON	ON
12	=	ON	ON	OFF	OFF	ON	ON	ON	29	=	OFF	ON	OFF	OFF	OFF	ON	ON
13	=	OFF	ON	OFF	OFF	ON	ON	ON	30	=	ON	OFF	OFF	OFF	OFF	ON	ON
14	=	ON	OFF	OFF	OFF	ON	ON	ON	31	=	OFF	OFF	OFF	OFF	OFF	ON	ON
15	=	OFF	OFF	OFF	OFF	ON	ON	ON	32	=	ON	ON	ON	ON	ON	OFF	ON
16	=	ON	ON	ON	ON	OFF	ON	ON	33-127	=	n	o	t	u	s	e	d

DEVICE ADDRESS	ZONE
0	NOT USED
1 TO 8	ZONE 1
9 TO 16	ZONE 2
17 TO 24	ZONE 3
25 TO 32	ZONE 4
32 TO 127	NOT USED