

# UltraFire

## Pairing Guide



**SMOKE ALARM**  
ULLS10RF



**HEAT ALARM**  
ULLH10RF

**READ & RETAIN THESE PAIRING INSTRUCTIONS**

## COMPATIBLE ALARMS

UltraFire devices can be interlinked wirelessly to Smoke Alarms (ULLS10RF) and Heat Alarms (ULLH10RF).

### 1. CONNECT

1.1 Plug alarm into pattress and switch on radio base, the pattress led will flash green twice per second. If not, please complete step 6.0 to reset the device.



1.2 Secure the alarm wire into the retaining slot.



**IMPORTANT:** the wire can interfere with the radio antenna if not secured in the retaining slot.

### 2. ALARM ASSEMBLY

2.0 Bring alarm & radio base together then twist to lock into place. The light will flash RED and the device will beep.



2.1 Repeat this procedure for each additional alarm.

### 3. LINKING

3.1 Press the TEST BUTTON on any assembled alarm, this will put it into linking mode and its light will flash red and green.

3.2 Press the TEST BUTTON on the next alarm to put it in linking mode, it will flash red and green.

3.3 Wait a few seconds for the alarm to beep and stop flashing its lights. The alarm is now linked.

3.4 Repeat step 3.2 & 3.3 for each alarm to be added to the system.

3.5 Once all alarms are linked, wait 20 seconds or press the test button on the first alarm to exit linking mode. If the test button is pressed on the first alarm to exit linking mode, the alarm will perform a test, step 4.1.

## 4. LINKED ALARMS READY FOR INSTALLATION

- 4.1 Press the TEST BUTTON on any one alarm and wait for each linked alarm to sound. (Due to signal timings each alarm may trigger at the same time making it difficult to detect a faulty alarm). Perform a test from each alarm in the system to ensure every alarm is successfully linked.
- 4.2 Install the alarms around your home then test again with the alarms in position to ensure there are no radio range issues.

## 5. LINKING ADDITIONAL ALARMS

To add a new alarm to an existing system complete step 1 and 2 for all new alarms.

- 5.1 Open any already linked alarm and press the white RF button on the radio pattrass to enter linking mode, the red and green led will flash as in step 3.1.
- 5.2 Repeat step 3.2 for all new alarms.
- 5.3 Press the white button on the already linked alarm to complete the process.

## 6. DEVICE RESET

- 6.1 To reset the pattrass and restore factory settings, Open the alarm device and hold down the white RF button until the light turns RED. This will restore factory settings and unlink that device from the system. The light will flash green twice per second as in step 1.1.

UltraFire

33 West Street, Alford, Lincolnshire, LN13 9FX, United Kingdom

Telephone: 0800 978 8262

Email: [support@ultra-fire.co.uk](mailto:support@ultra-fire.co.uk)

For support visit: <https://www.ultra-fire.co.uk/contact/>