Simplicity Micro

ADDRESSABLE
FIRE ALARM PANEL
COMPLIES WITH EN54 part 2 & part 4
MEETS THE FUNCTIONAL REQUIREMENT OF BS:EN 5839 part 1

Wiring the sounder base

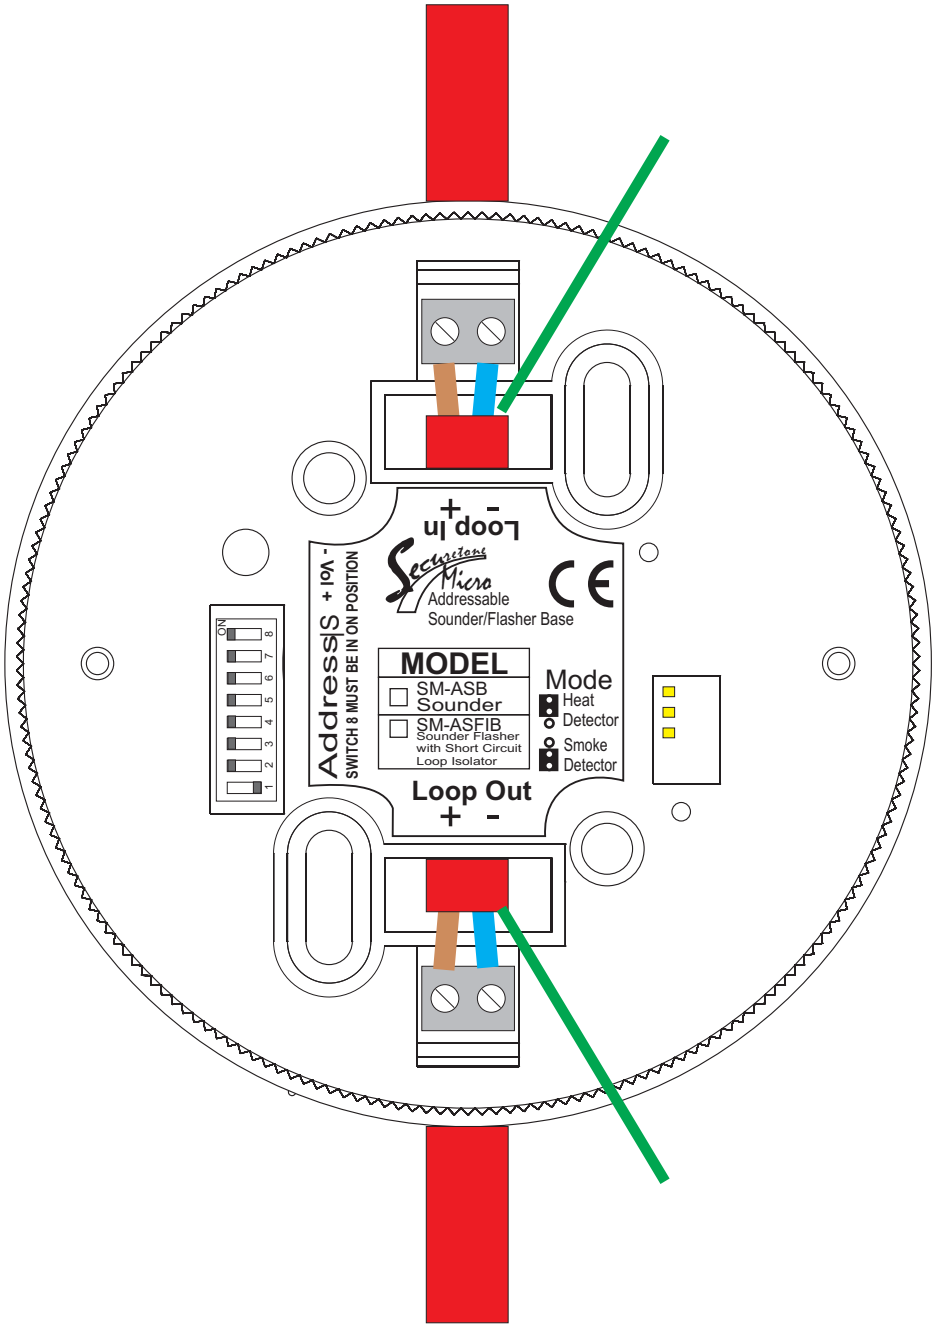

1. Fit the sounder base to the ceiling, feeding the loop in & loop out Cabled through the cable entry in the plastic.
2. Connect the loop in +ve (usually BROWN) wire to loop in+ connection.
3. Connect the loop in -ve (usually BLUE) wire to loop in- connection.
4. Repeat for loop out cable.