



Dorgard Adapter Plate for Steel Doors

Installation Instructions

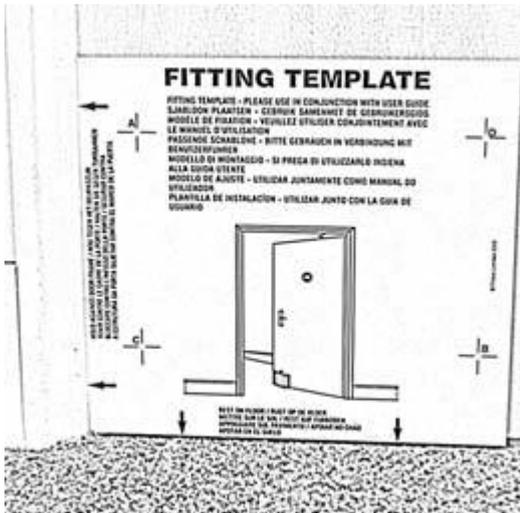


1. Remove the four screws from the adapter plate.
2. Close the fire door. Place the fitting template (provided with the Dorgard) against the door on the side that shuts against the door frame. Ensure the fitting template matches your view of the door.
3. Clean the steel surface underneath the template with the cleaning cloth provided and let the surface dry.
4. Using the template, mark points A, B, C, and D on the door using a pen.
5. Hold the adapter plate against the door, matching the brass threads with the markers on the door.
6. Unpeel self-adhesive stickers and position carefully (as in section 5) and press hard, ensuring that the plate is fully secured to the door.

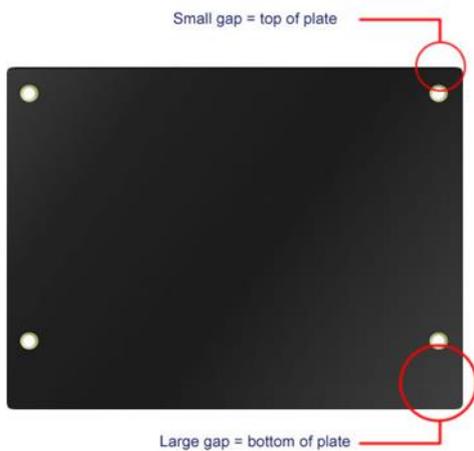

WARNING!

Make sure that the adapter plate is installed the correct way round as shown in the image above. Also ensure that the plate sits straight on the door. The position of the plate **CANNOT** be adjusted after installation.

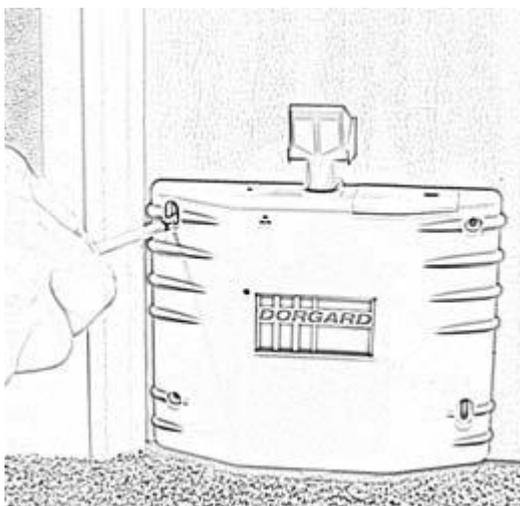

7. Affix Dorgard to the adapter plate with the screws from step 1.
8. Do not hold the door open with the Dorgard for 72 hours to allow the adhesive to bond.

Note:

Dorgard will not operate until the batteries have been inserted. Batteries can be removed or inserted when a Dorgard is affixed to a door.