



Pairing Radio Linked Alarms Instructions

PLEASE NOTE

Assemble **ALL ALARMS** as per points 1 & 2 before moving to point 3

Note the **10 SECOND WINDOW** at point 3.7. If you miss this 10 second window, you will need to reset all alarms and start again

If you have difficulty connecting your alarms, please watch our interlink video guide or contact Safelincs' customer support team.

www.safelincs.co.uk/firehawk-interlink-video-guide

0800 612 6537 – or – support@safelincs.co.uk

1 CONNECT

1.0 Plug alarm into pattress and switch on radio base, the pattress led will flash green twice per second. If not please complete step 6.0



2 ALARM ASSEMBLY

2.0 Bring alarm & radio base together then twist/slide to lock into place.



Wait for smoke or heat alarm to **BEEP** 📢 **TWICE**

Wait for the CO alarm to **BEEP** 📢 **FOUR TIMES**

(Repeat steps 1.0 and 2.0 for each alarm)

3 PAIRING TWO ALARMS

3.1 Place two alarms on the table spaced approximately 20cm APART.

3.2 Press the TEST BUTTON on one alarm and wait THREE SECONDS.


3.3 Press the TEST BUTTON on the other alarm.

3.4 Watch carefully as both pattresses **FLASH GREEN** 🌟 **AND RED** 🔴

3.5 As soon as one **FLASHES GREEN ONLY**, move it to one side.

3.6 The other pattress will continue to flash red/green until it **BEEPS** 📢 then it will **FLASH GREEN** 🌟 (The CO will **BEEP** 📢 **FOUR TIMES**) **THE TWO ALARMS ARE NOW PAIRED.**

3.7 There is now a 10 SECOND WINDOW to allow another device to be added to the system Step 4.0 If no other devices are to be added proceed to Step 5.0

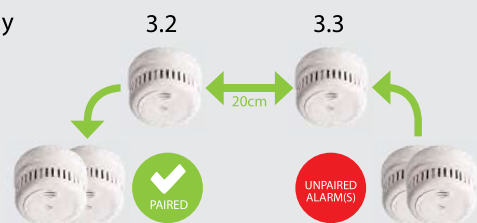

PLEASE read all instructions BEFORE beginning to pair a system!

4 PAIRING ADDITIONAL ALARMS

- 4.1 To add additional alarms to the system simply PLACE THE PAIRED ALARM THAT BEEPED (see section 3.6) approximately 20cm apart to a ASSEMBLED ALARM (see point 2.0) UNPAIRED ALARM.
- 4.2 Firstly, press the TEST BUTTON on the PAIRED ALARM and wait THREE SECONDS.
- 4.3 Then press the TEST BUTTON on the UNPAIRED ALARM.
- 4.4 Repeat steps 3.4 to 3.6




5 PAIRED ALARMS READY FOR INSTALLATION

- 5.1 When all alarms have been added to the system (smoke / heat alarm will BEEP 🚫 ONCE, CO alarms will BEEP 🚫 FOUR TIMES) the pattresses will now continue to FLASH GREEN 🟢.
- 5.2 Once pattresses have stopped FLASHING GREEN 🟢 and BEEPING 🚫 the alarms are now READY FOR INSTALLION.
- 5.3 If any device fails to beep and flashes red please reset all devices step 6.0 and repeat the pairing process.
- 5.4 Assuming everything went to plan please now test each alarm in the system.



6 DEVICE RESET

- 6.1 To reset the pattress, remove the alarm device and press the black button. This will restore factory settings and unlearn all paired devices. The Led will flash red four times then begin to flash green as in step 1.0.
- 6.2 Start again and repeat pairing process.

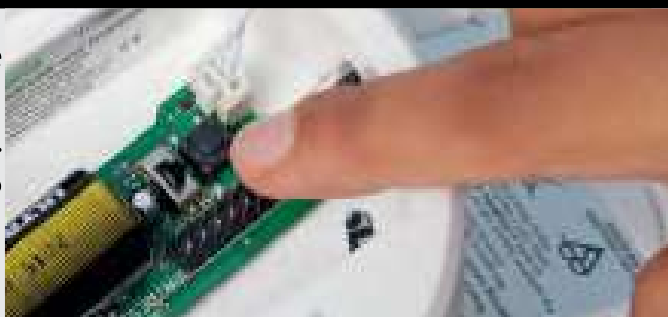

[CLICK HERE FOR ONLINE TROUBLE SHOOTING GUIDE](#)