

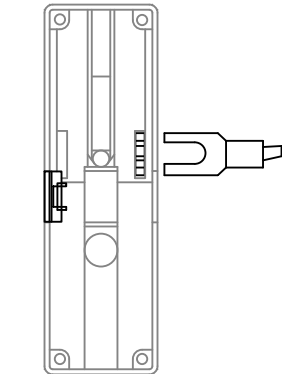


CHANGING HANDS FOR PANIC & EMERGENCY LATCH



HANDING FOR LEFT HAND SIDE

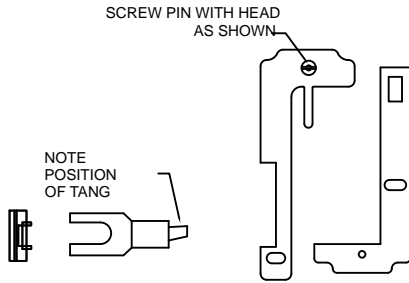


ASSEMBLE BLANKING PLATE AND LEVER ARM AS SHOWN

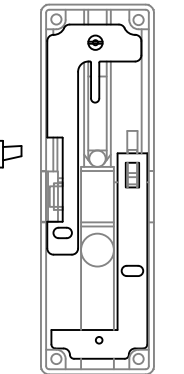


ASSEMBLE SLIDERS AS SHOWN

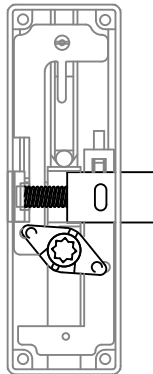


ASSEMBLE BOLT, SPRING AND FOLLOWER ASSEMBLY MAKING SURE DRIVE DOGS LOCATE IN SLIDER SLOTS AS SHOWN

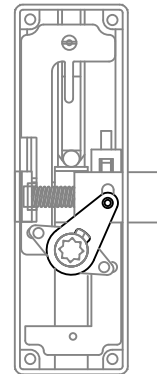

ASSEMBLE FOLLOWER ARM LOCATING PIN IN BOLT SLOT AS SHOWN ABOVE

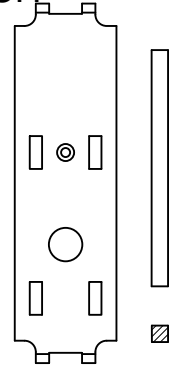



REPLACE BACKPLATE

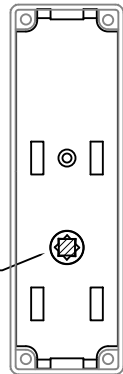


ROTATE FOLLOWER

WHEN USED WITH AN OUTSIDE ACCESS DEVICE FULLY ROTATE FOLLOWER ANTICLOCKWISE USING AN 8MM SPINDLE



HANDING FOR RIGHT HAND SIDE

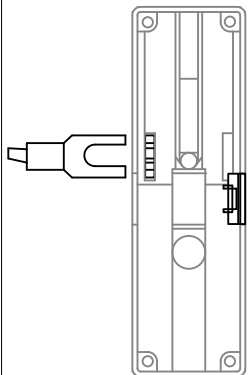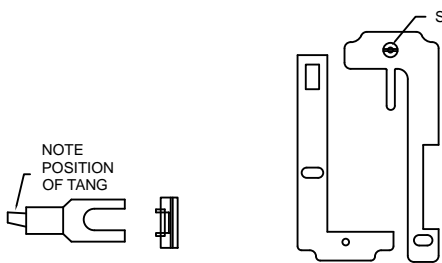


ASSEMBLE BLANKING PLATE AND LEVER ARM AS SHOWN

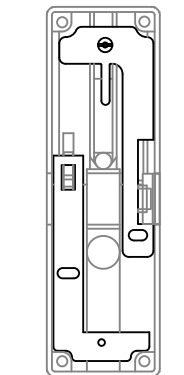


ASSEMBLE SLIDERS AS SHOWN

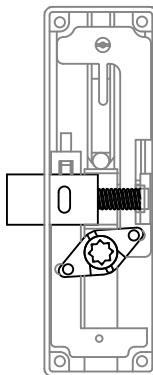


ASSEMBLE BOLT, SPRING AND FOLLOWER ASSEMBLY MAKING SURE DRIVE DOGS LOCATE IN SLIDER SLOTS AS SHOWN

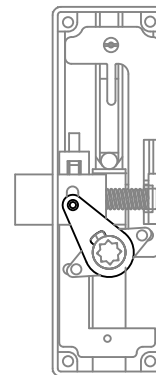

ASSEMBLE FOLLOWER ARM LOCATING PIN IN BOLT SLOT AS SHOWN ABOVE

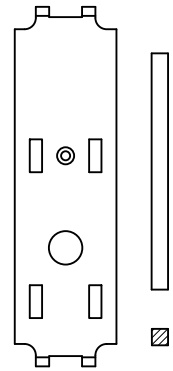

REPLACE BACKPLATE

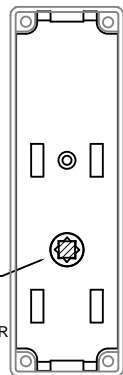

ROTATE FOLLOWER

WHEN USED WITH AN OUTSIDE ACCESS DEVICE FULLY ROTATE FOLLOWER CLOCKWISE USING AN 8MM SPINDLE