
## **Exit Stopper®**

## Quick Install

STI-6400 Series

## **SET UP**


1. Key in OFF position

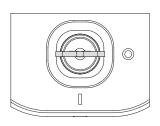


2. Remove security screw with provided wrench




**3.** Remove cover from base, push on lock to separate

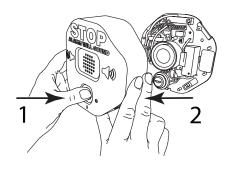


**4.** Choose setting – refer to switch table, default settings shown side 2

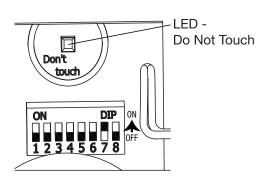


**5.** Unwrap battery and connect




**6.** Terminal block (for remote and relay options) – refer to full install online for wiring connections

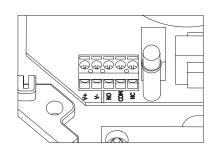

7. Test – place magnet next to reed, turn on, separate magnet from reed

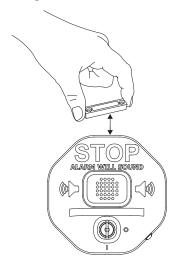


8. Apply language label if desired

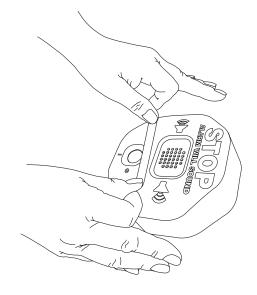


## **MOUNTING**


9. Place reed at desired location (top, right, bottom or left)

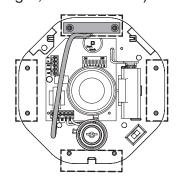

10. Position base. Mark and drill four (4) holes 1" (25mm) deep. Using plastic anchor, drill 3/16" (4.5mm). Install into wood or steel: drill 9/64" (3.5mm). Mount using (4) M4 x 25mm screws.

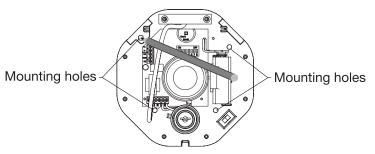


11. Install reed magnet, mark with pencil, drill, install using plastic anchor, drill 3/16" (4.5mm). Install into wood or steel: drill 1/8" (3mm). Mount with (2) M3.5 x 32mm screws.

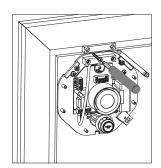

**13.** Replace cover, snap lid from top, secure with security screw



<b>12.</b> T	est.	turn	kev	on.	open	door
--------------	------	------	-----	-----	------	------

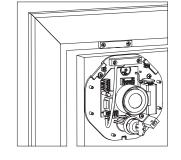

SWITCH SETTINGS	1	2	3	4	5	6	7	8
Arming - immediate	0FF*							
Arming - 15 second delay								
Trip - immediate		0FF*						
Trip - 15 second delay		ON						
Shut-off based on duration (switches 4 & 5)			0FF*					
Shut-off approx. 3 sec. after door closes			ON					
Duration - 30 second alarm				0FF*	OFF*			
Duration - 180 second alarm				0FF	ON			
Duration - continuous alarm				ON	OFF			
Duration - annunciator mode				ON	ON			
Low battery detection on - Turn switch off						OFF*		
Low battery detection off - Turn switch on						ON		
Volume - high							ON*	
Volume - low							0FF	
Relay function → OFF								0FF*
Relay function → ON								ON

\*default

NOTE: Disconnect all power sources before changing switch settings.

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at **www.sti-usa.com/wc14**.

⚠ WARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



2306 Airport Rd • Waterford, MI 48327, USA Phone: 248-673-9898 • Fax: 248-673-1246 info@sti-usa.com • www.sti-usa.com

Warranty