



HANDING OF OUTSIDE ACCESS DEVICE


RIGHT HAND FRONT VIEW

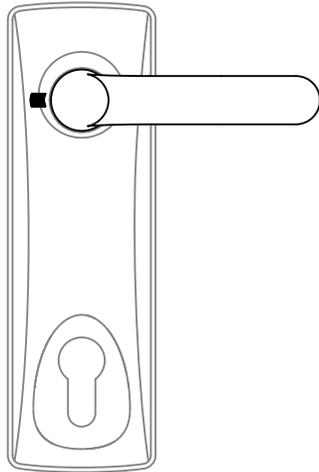


REAR VIEW

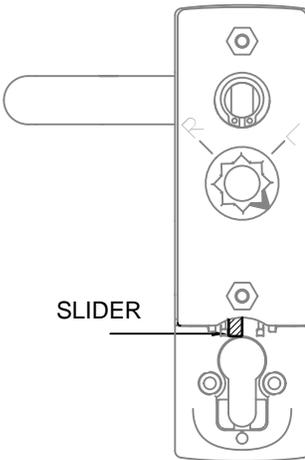

REAR VIEW

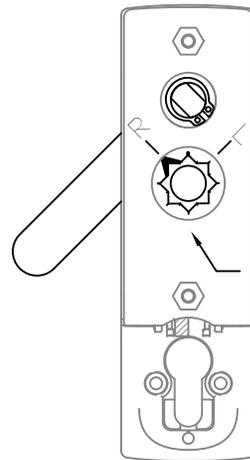

REAR VIEW

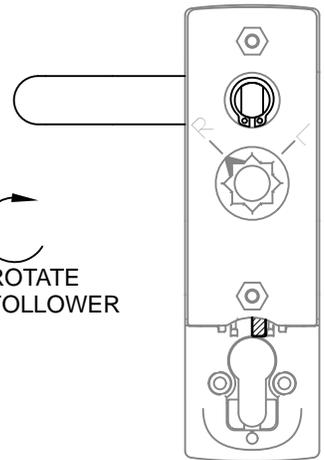

USING A 2.5MM ALLEN KEY LOOSEN THE GRUB SCREW AND REMOVE THE HANDLE. REPLACE AS SHOWN AND RETIGHTEN THE GRUB SCREW


LOOKING AT THE LOCK FROM THE REAR, MOVE THE SLIDER TO THE LEFT

HOLD THE HANDLE IN THE DOWNWARD POSITION AND ROTATE THE FOLLOWER CLOCKWISE UNTIL THE ARROW ALIGNS WITH THE LETTER (R)


RELEASE THE HANDLE AND MOVE THE SLIDER TO THE RIGHT

LEFT HAND


FRONT VIEW

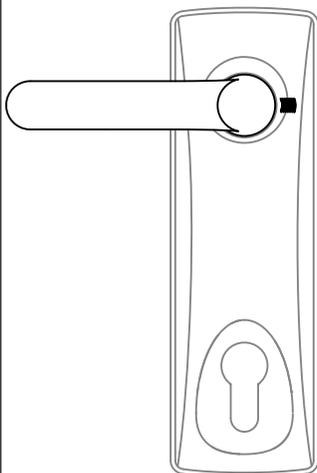


REAR VIEW

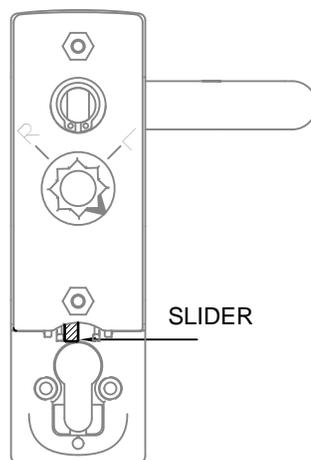

REAR VIEW

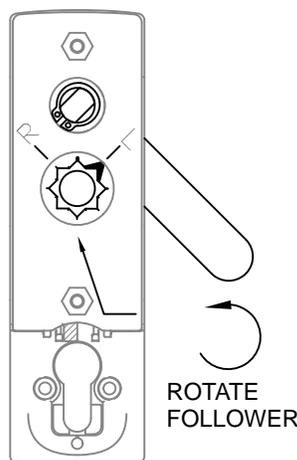

REAR VIEW

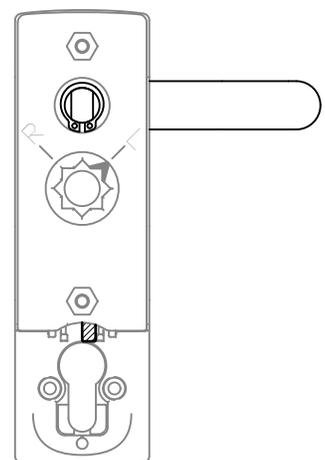

USING A 2.5MM ALLEN KEY LOOSEN THE GRUB SCREW AND REMOVE THE HANDLE, REPLACE AS SHOWN AND RETIGHTEN THE GRUB SCREW

LOOKING AT THE LOCK FROM THE REAR, MOVE THE SLIDER TO THE LEFT

HOLD THE HANDLE IN THE DOWNWARD POSITION AND ROTATE THE FOLLOWER ANTI-CLOCKWISE UNTIL THE ARROW ALIGNS WITH THE LETTER (L)

RELEASE THE HANDLE AND MOVE THE SLIDER TO THE RIGHT