

The symbols above mean that the alarm is suitable for use in domestic premises (including static caravan holiday homes), caravans, motor caravans and boats.

This manual contains important safety information about the installation and operation of the alarm. Read the manual carefully and keep it in a safe place for future reference.

Warnings

Installation of a CO alarm should not be used as a substitute for proper installation, use and maintenance of fuel burning appliances including appropriate ventilation and exhaust

This CO alarm is designed to protect individuals from the acute effects of carbon monoxide exposure. It will not fully safeguard individuals with specific medical conditions. If in doubt consult a medical practitioner.

Long exposure to low levels (>10 ppm) of CO may cause chronic effects. If in doubt consult a medical practitioner.



XC70 XC100 XC100D

Honeywell offers three versions of its battery powered CO alarms, with different user interfaces and lifetime:

The basic model XC70 uses indicator lights to visually signal the state of the unit and comes with 7 years life and warranty

XC100 and XC100D both show big alarm messages in the case of

an alarm, and both come with 10 years life and warranty. XC100D has an LCD screen to provide more information about

In addition, all versions have an audible alarm and a TEST/HUSH

rising CO levels and recorded CO peak levels.

All Honeywell X-Series alarms can be wirelessly interconnected using an optional plug-in module. This means that if one X-Series CO or Fire Alarm triggers an alarm, all interconnected units will give an audible alarm as well. This is especially useful, when living in a large or multi-story dwelling. Some wireless module information is included in this manual for completeness.

3. About Carbon Monoxide (CO)

Carbon Monoxide (CO) is an invisible, odourless gas which is highly toxic. It is produced by the incomplete burning of fuels such as wood, charcoal, coal, heating oil, paraffin, petrol, natural gas, propane, butane etc. and by cigarette smoke. A dangerous level of CO can occur if an appliance is faulty or badly maintained, if a flue is blocked or if a room is inadequately ventilated.

The poisoning effect of breathing in CO depends on the concentration (described in parts per million, ppm) and how long you are exposed for.

Concentration	Signs and Symptoms
~ 100 ppm	Slight headache, flushing of skin (indefinite exposure)
200 – 300 ppm	Headache (5 – 6 hour exposure)
400 – 600 ppm	Severe headache, weakness, dizziness, nausea, vomiting (4 – 5 hour exposure)
1100 – 1500 ppm	Increased pulse and breathing rate, syncope (fainting), coma, intermittent seizures (4 – 5 hour exposure)
5000 – 10000 ppm	Weak pulse, depressed respiration / respiratory failure, death $(1-2 \text{ minutes exposure})$

Source: Health Protection Agency Compendium of Chemical Hazards, Carbon Monoxide, Version 3, 2011

The CO alarm will activate if it has detected a certain concentration for a given time, as described below:

50 ppm: Alarm between 60 and 90 minutes

100 ppm: Alarm between 10 and 40 minutes 300 ppm: Alarm within 3 minutes

The CO alarm is set in accordance with the relevant European standard to provide alarms that are determined by the concentration and how long it has been present. This ensures that the alarm activates when dangerous levels of CO have built up over time and immediate action is required, and avoids false alarms from temporary low levels of CO (e.g. from cigarette smoke).

4. CO Alarm Operation

XC70 Gas inlet TEST/HUSH buttor Fault hush Alarm hush Test with reduced.

XC100 / XC100D



Display (XC100D only)

Status

NORMAL

OPERATION

ALARM



Remote alarm triggered

All alarms have four status indicator lights, an audible alarm and a **TEST/HUSH** button

The green POWER light indicates that the unit is activated and working normally.

The red ALARM light indicates that a dangerous CO condition has been detected.

The blue **VENTILATE** light gives an early indication of a dangerous CO condition

The yellow FAULT light indicates that the unit is not working

The TEST/HUSH button is used to test the unit, or to mute an alarm or fault signal.

The green POWER light will flash once per minute, to indicate that your alarm is working. The screen of the XC100D will be blank.

If a dangerous CO condition is detected the red ALARM light/ message will flash and the audible alarm will sound continuously. XC100D will display the current CO level and a skull symbol.

If the unit is in ALARM and the gas clears, the unit will go into Alarm Memory mode. Press the TEST/HUSH button to return to normal operation.

If your unit is in ALARM, keep calm, and carry out the following actions in the order given:

- · Open all doors and windows to increase the rate of
- Stop using all fuel-burning appliances and turn them off where possible
- If the alarm continues, then evacuate the premises. Leave the doors and windows open, and only re-enter the building when the alarm has stopped
- Get medical help for anyone suffering the effects of Carbon Monoxide poisoning, such as headache or nausea, and advise that Carbon Monoxide inhalation is suspected
- Telephone the gas or other fuel supplier on their emergency number, so that the source of carbon monoxide emissions can be identified and corrected
- · Do not use the fuel-burning appliances again until they have been checked and cleared for use by a competent person according to national regulations

Note: There may be another source of carbon monoxide emission apart from fuel-burning appliances, for example a large amount of tobacco smoke, town gas or emission from a smouldering fire.

If the unit is in ALARM, the audible alarm can be silenced for 5 minutes by pressing the TEST/HUSH button (the red light will continue to flash, XC100D will show the muted symbol). If a dangerous gas level is still present after 5 minutes, the audible alarm will sound again.

Note: The **HUSH** function only operates if the gas reading is less than 350 ppm and can only be operated once

CO does not leave any detectable traces, so if an alarm happens while you are out, the memory function will keep the red light flashing till the button is pressed or 7 days have passed.

XC100D will also show the recorded peak concentration level for 10 seconds after pressing the button.

Event logger

Honeywell's CO alarms record a history of events, which can be downloaded by professionals. This provides a more in depth analysis of CO events such as detailed information on the CO concentration of the last 7 days, and weekly maximums for the whole operating life. Dates of alarm events are recorded.

4. CO Alarm Operation continued (XC100D) Ventilate Sound (Blue) Normal operation No gas present





1 flash once every minute





Lights and Sound

Fault

(Yellow)









Current CO concentration

Dangerous CO condition detected


Dangerous CO condition detected by

another interconnected CO alarm

Fire detected by an interconnected

fire alarm

Continuously 4 chirps and flashes

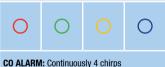

REMOTE CO or FIRE ALARM***





















Current CO concentration and

Dangerous CO condition detected whilst user was absent. Currently, no dangerous CO level present

A dangerous CO condition is build-

ing up.

A full CO alarm will be triggered

later, if the CO level does

The unit has reached its end of life

and must be replaced

The wireless module is not working

correctly. Refer to the wireless module manual for further details

1 chirp and flash once every minute

PRE-ALARM**

FAULT

ALARM MEMORY











Contact OFTEC on 0845 658 5080



not decrease percentage of full alarm level

1 chirp and flash once every minute

Oil users:

FAULT***



only if activated during first time switch on *only applicable when a wireless interconnection plug-in module is installed GAS EMERGENCY SERVICE TELEPHONE NUMBER 0800 111 999 Contact numbers for other fuel appliances:

Solid fuel users: Contact HETAS on 0800 600 000

For liquified petroleum gas (LPG),

Bulk and metered supplies: see telephone number on the bulk storage vessel or at the meter

Cylinder supplies; see gas supplier emergency contact details in the local telephone directory (The Calor Gas Emergency number is 08457 444999)



Contact us

www.homesafety.honeywell.com www.honeywellanalytics.com www.honevwell.com

Honeywell Analytics Ltd. 4 Stinsford Road **Nuffield Industrial Estate** Poole, Dorset BH17 0RZ Tel: +44 (0)1202 645577 Fax: +44 (0)1202 665331

consumer@honeywell.com

IIK customer service centre

Acts for and on behalf of Life Safety Distribution AG, Javastrasse 2, 8604 Hegnau, Switzerland by its Authorised Representative Honeywell Inc.

Honeywell

Please Note:
While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions.
Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.

l56-4127-000 MAN0936_Issue 2_04/14_EN © 2014 Honeywell Analytics

Operating and **Installation Instructions**

Honeywell



X-Series Battery CO Alarms XC70 XC100 XC100D

4. CO Alarm Operation continued

Ventilate - Pre-Alarm

Dangerous CO levels may be caused by faulty appliances, which start to produce more and more CO over time. Pre-alarms will give an early warning of such situations even if the alarm levels are not being reached. If these occur frequently it is recommended to call a technician for further investigations. The pre-alarm will start giving indications once 25% of the alarm level (time and concentration) has been reached. For example, if 50 ppm CO is present, the pre-alarm will start after 15-23 minutes instead of 60-90 minutes for a full alarm.

By default, this function is deactivated as it is not required to protect you from dangerous levels of CO. The installation section gives details of how to activate it. The pre-alarm is intended to help the knowledgeable end-user to get an early indication of malfunctioning appliances.

If the Pre-Alarm function is activated, and CO is detected, the blue ventilate light will flash with a short chirp 1, 2 or 3 times every 30 seconds when 25%, 50% or 75% of the alarm level respectively has been reached, XC100D will also indicate the percentage of the alarm level and current CO concentration. The audible alarm can be silenced by pressing the TEST/HUSH button (XC100D will show the muted symbol).

15

Fault – end of unit life

If the unit is in FAULT the YELLOW light will flash every minute with a short chirp. The CO alarm must not be used any more, and should be replaced. (The only exception is a wireless module fault, which is signalled with a triple chirp. In this case, refer to the wireless module manual for further details). The chirps can be silenced for 24 hours by pressing the TEST/HUSH button. The 24 hour period can be restarted by pressing the TEST/HUSH button twice (XC100D will show the muted symbol).

Note: The fault signal is caused by a low battery, an electronics failure or the end of the CO sensor life. The end-of-life signal comes from an inbuilt timer, and is given 10 years (XC100, XC100D models) or 7 years (XC70 model) after activation.

A replace by date is also printed on the side of the unit to facilitate an advance replacement before the end-of-life signal is given. This date includes a 6 months shelf life, i.e. this is the latest date the unit should be replaced. An end-of-life signal may he given earlier.

14

4. CO Alarm Operation continued

Low Level Monitoring Mode

Normally, the CO alarm only signals an Alarm condition after a gas concentration higher than 43 ppm has been present for a period of time. It can be temporarily set to a low level monitoring mode, to enable it to be used as a measuring device. Once this mode is activated, the alarm will signal the presence of a CO level higher than 10 ppm immediately.

To activate the low level monitoring mode, press and hold the test button for 18 seconds. (During this time, the low volume and high volume tests will be active). After 18 seconds you will see a green and a blue light flash and hear a short chirp and you can release the button. The low level monitoring mode is now active for 60 minutes, which is indicated by the flashing green light every 4 seconds.

CO concentrations higher than 10 ppm will be indicated by a flashing blue ventilate light. XC100D will also display the CO concentration level.

The low level monitoring mode will end automatically after 60 minutes or by pressing the button at any time.

17

Lights	Sound	Display*	Meaning						
Alarm (red) Power (green) Fault (yellow) Ventilate (blue)	◄ 》	15	Green power light flashing = Low level monitoring						
•cocecoecoecoecoecoecoecoecoecoecoecoecoe	Current CO concentration	mode. Blue Ventilate light flashing = CO detected							
*only available on XC100D									

5. Precautions during use

The CO alarm does not require any maintenance other than to clean the outside case occasionally with a clean tissue. Ensure that the holes on the front of the unit are not blocked with dust or dirt. Some common household substances can affect the sensitivity of the CO alarm. Do not use household cleaners, polishes, perfumes or aerosol sprays on or close to the alarm. Avoid the use of nail polish remover, model paint or model glue close to the alarm.


Automatic self-test

Your CO alarm has an automatic self-test function for the electronics, which is performed every 60 minutes.

Monthly Test

The CO alarm should be tested once per month, to check that all visual and audible signals are working.

Press the test button for 1 second to activate a full test cycle showing all lights/messages (green, vellow, blue, red) and sound the audible output at a reduced level. If you wish, hold the test button for 10 seconds to test with the full 85dB sound level.

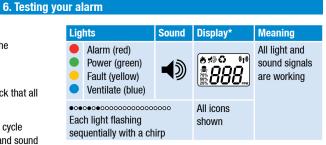

*only available on XC100D

Test/Measuring mode overview:

Press the button for	1 s	2 s	3 s	4 s	5 s	6s	7s	8 s	9s	10s	11s	12s	13s	14s	15s	16s	17s	18+s
Unit mode		Green + cl Yellow + cl Blue I + cl	nirp Flash nirp Flash	Rec	duced vo patt		arm	Pau	use	High	volume :	alarm pa	attern		Pau	use		Low level monitoring mode start indication: Green Flash + Blue Flash + chirp
			Done o	even if b	utton rel	eased			Wil	l go bacl	k to Norn	nal mode	e as sooi	n as butt	on releas	sed		Button may be released

8. Installation - Where to put the alarm

Gas detected Carbon Monoxide **Electrochemical Cell** Sensor XC70: Ecosure technology XC100, XC100D: EcosureX Third party FN50291-1:2010 EN50291-2:2010 approvals BSI Kite marked KM 565387 RoHS, REACH Other Self test Every 60 minutes Lifetime and XC70: 7 years XC100, XC100D: 10 years warranty Temperature -10°C to +45°C 25 - 95% RH (non-condensing) Humidity IP rating Long life lithium battery, 3 V, sealed for the life **Power supply** of the product (no replacement necessary) Visual Power: Green LED Alarm: Red LED - big message indicators Fault: Yellow LED Ventilate: Blue LED

	PPM	Full Alarm	Pre- Alarm	Low Level Monitoring Mode					
	≥ 10	-	-						
Alarm levels	≥ 43	~ 75 minutes	~19 minutes						
	≥100	~25 minutes	~ 6 minutes	Immediately					
	≥ 300	~90 seconds	~ 23 seconds						
Dimensions	100 mm x 72 mm x 36 mm								
Weight	133 g								
Installation	Free standing, wall mount, ceiling								


Ideally, an alarm should be fitted in every room containing a fuel-burning appliance. It is strongly recommended to also fit alarms in bedrooms, and in rooms where you spend a lot of time.


If the alarm is being fitted in the same room as a fuel-burning appliance:

- It should be located close to the ceiling and at a height greater than the height of any door or window
- · A ceiling mounted alarm should be at least 300 mm from any wall, and a wall-mounted alarm should be at least 150 mm from the ceiling. Note: Ensure that you can access the tamper proof locking tab.
- The alarm should be at a horizontal distance of between 1 m and 3 m from the nearest edge of the potential source

If the alarm is being fitted in a room without a fuel-burning appliance it should be located relatively close to the breathing zone of the occupants

For premises such as bedsits, caravans or boats where the accommodation is a single living space incorporating the sleeping area, the apparatus should be positioned as far from the cooking appliances as possible but near to where the person sleeps.

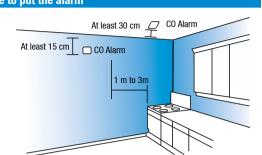

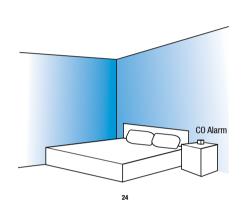

11. First time switch on

Note: The optional Pre-Alarm function can only be activated

The alarm is switched on by clipping it into place in the wall

Caution: Even if your alarm is free standing, you must attach

during the first 30 seconds after switching on the alarm.

mounting plate.

the wall mounting plate

9. Installation - Where not to put the alarm

The alarm should not be installed:

- In any outside location or where the temperature may drop below -10°C or exceed 45°C
- In an enclosed space or where it can be obstructed

> 90 dB @ 1 m

- · Directly above a sink or in the immediate vicinity of a cooking
- Next to a door or window, extractor fan or air vent
- · Where dirt and dust may block the sensor

· In a damp or humid location

10. Installation - Mounting the alarm

The apparatus should be installed by a competent person.

Warning

Contents:

- CO alarm
- · Wall mounting plate
- Fixing nail
- Instructions (this document)


Caution: The alarm must be connected to the wall mounting plate to switch it on.

The alarm can be free standing (e.g. placed on a shelf or table), or fixed to a wall or ceiling. There are two options for wall mounting, either hooked onto the nail provided, or permanently fixed using appropriate wall plugs and screws (not provided).

- For quick wall mounting: 1. Place the wall mounting plate where you want to mount the alarm
- 2. With a pencil, mark the location of the central key hole
- 3. Tap in the nail (provided) at the marked location

For tamper proof wall or ceiling mounting:

- 1. Place the wall mounting plate where you want to mount the alarm
- 2. With a pencil, mark the location of the two screw holes
- 3. Drill holes of diameter 5 mm and insert appropriate wall plugs
- 4. Screw the mounting plate to the wall/ceiling

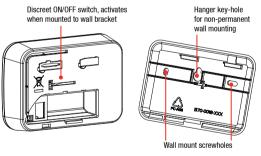


1. Fit the alarm onto the wall mounting plate approximately 10 mm to the left of centre 2. Press firmly against the wall plate and slide the alarm to the riaht

- 3. Tamper proof locking tab will click into place
- 4. All lights will flash in sequence and the sounder will chirp to indicate that the alarm has been activated.
- 5. The green light will blink once per minute indicating that the alarm is operating
- 6. Test the alarm following the procedure for the Monthly Test.

12. Activate the Pre-Alarm function

To activate the Pre-Alarm function, which gives an early indication of a dangerous CO condition, press the TEST/HUSH button five times during the first 30 seconds after switching on the alarm. The power light will flash each time the TEST/HUSH button is pressed. If activation is successful, the blue VENTILATE light will flash five times in conjunction with short chirps.

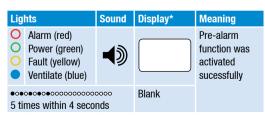


If activation is not successful, switch off the alarm and try again.

To de-activate the Pre-Alarm function at any time, switch off the alarm, and then switch it on again without pressing the TEST/HUSH button. To check if the Pre-Alarm function is activated, briefly press the TEST/HUSH button. If the Pre-Alarm is activated, the green **POWER** and the blue **VENTILATE** lights will flash once together. If the Pre-Alarm function is not activated, only the green POWER light will flash.

13. Switch off the Alarm

The alarm is switched off by removing it from the wall mounting plate. Use a suitable tool such as a small screwdriver to press on the tamper proof tab located at the top right edge of the alarm, and then slide the alarm to the left to remove it from the wall mounting plate.

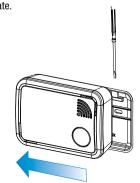

The CO Alarm is certified by BSI to the European standard FN 50291-1 "Electrical apparatus for the detection of carbon monoxide in domestic premises" and EN50291-2 "Electrical apparatus for continuous operation in a fixed installation in recreational vehicles and similar premises including recreational craft". It conforms to the Low Voltage Directive (LVD) and the Restriction of Hazardous Substances Directive (RoHS).

15. Troubleshooting and getting assistance

After you have carefully read all instructions and your alarm still fails to work, contact the nearest customer service centre listed in the "Contact Us" section. Customer service advisors may be able to resolve your problem quickly. Alternatively contact your local supplier.

If the product needs to be returned for repair or replacement, put it in a padded box with a letter describing the fault and postage paid. For battery powered devices, ensure that the alarm has been

A proof of purchase must be provided to claim repair under warranty.

16. End of life

When the unit has come to the end of its life, dispose of it in accordance with local regulations. It is classified as electronic waste and contains a battery and therefore should be disposed of separately from household waste.



17. Disclaimer

This Carbon Monoxide alarm is designed to alert you to a potentially dangerous build-up of Carbon Monoxide gas. It is not designed to remedy a Carbon Monoxide problem nor to locate a specific source of Carbon Monoxide. Honeywell shall not be liable to pay for any Carbon Monoxide investigation or service call carried out or arranged in response to an alarm.

31

18. Warranty

Honeywell warrants your new CO alarm for seven years (XC70 model) or ten years (XC100 and XC100D models) from the date of purchase by the end user or until the expiry date on the side of the unit, whichever occurs first, according to the specifications as set out in this instruction manual.

We will, at our discretion, repair or replace, with same or similar product, any part of the CO alarm which is found to be defective in either materials or workmanship within the warranty period.

We shall be under no obligation to repair or replace units which are found to be defective in any way due to unreasonable use or neglect, improper storage, used or maintained not in accordance with the user manual or if the product has been tampered with or found to have been dismantled.

This warranty is instead of and excludes all warranties implied by law, and to the extent permitted by law, our liability under the warranty is capped at the price of the product.

In no event are we liable for (a) any direct, indirect, incidental, consequential loss; (b) any loss arising from business interruption; (c) loss of profits; (d) loss of revenue; (e) loss of use of any property or capital; (f) loss of anticipated savings or loss of data.