
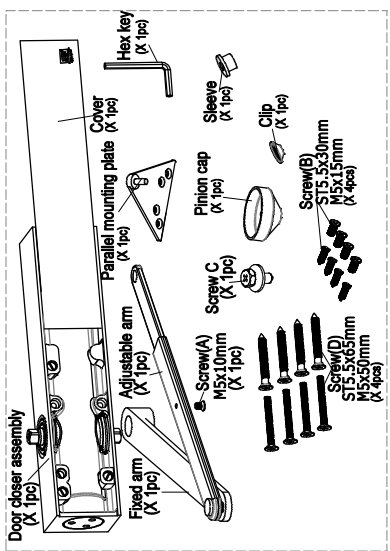


CE26V Rack And Pinion Closer INSTALLATION INSTRUCTIONS - Parallel Arm (Fig 66) Left Hand

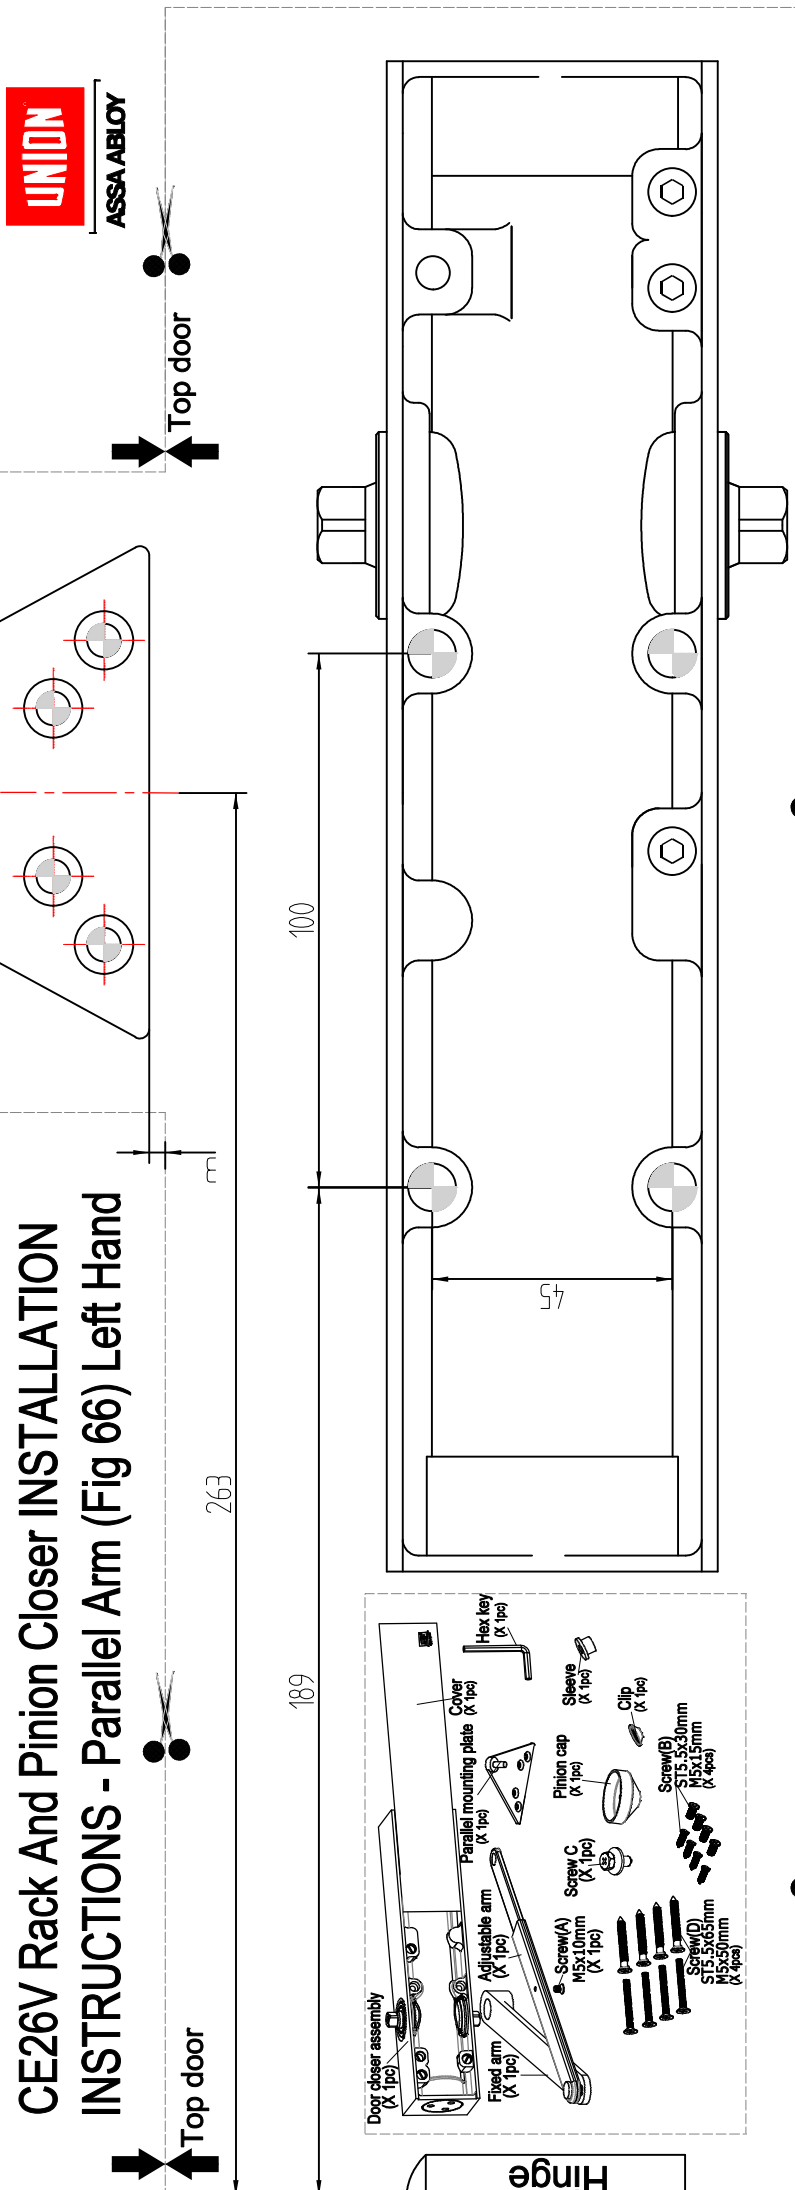

1 - Fit template to door, mark holes then remove template.

2 - Fit Parallel arm mounting plate to frame using 4-off screws(B).

3 - Fit body to door face using 4-off screws(D). Use spirit level to get body parallel to door frame.

4 - Remove screw(A) from adjustable arm and take sliding part out.

5 - Use spanner to turn pinion 45° for pre-load. Hold pinion in tension while fitting fixed arm parallel to door face. Use screw C to fix arm to body.

6 - Assemble adjustable arm, parallel arm mounting plate, sleeve and clip together.

7 - Move fixed arm to meet adjustable arm. Slide adjustable arm inside the channel. Keep adjustable arm parallel to door face and tighten screw(A) to lock sliding arm in place.

8 - According to door details (see table at side of template), adjust the closer power with hex key.

9 - Use hex key to adjust Speed and Latch valves and BC valves, assemble cover into body.

10 - Put pinion cap on body.

Tools required:
Screw driver
Spirit level
Spanner

BACKCHECK

SEWRE LIGHT/OFF

FAST SLOW



POWER ADJUSTMENT

2 3 5
Ox3 Factory Preset Ox18


EN1154

Factory Preset at 3


CE26V Rack And Pinion Closer INSTALLATION INSTRUCTIONS - Parallel Arm (Fig 66) Right Hand

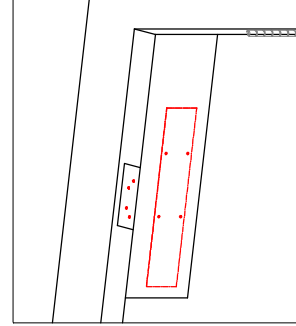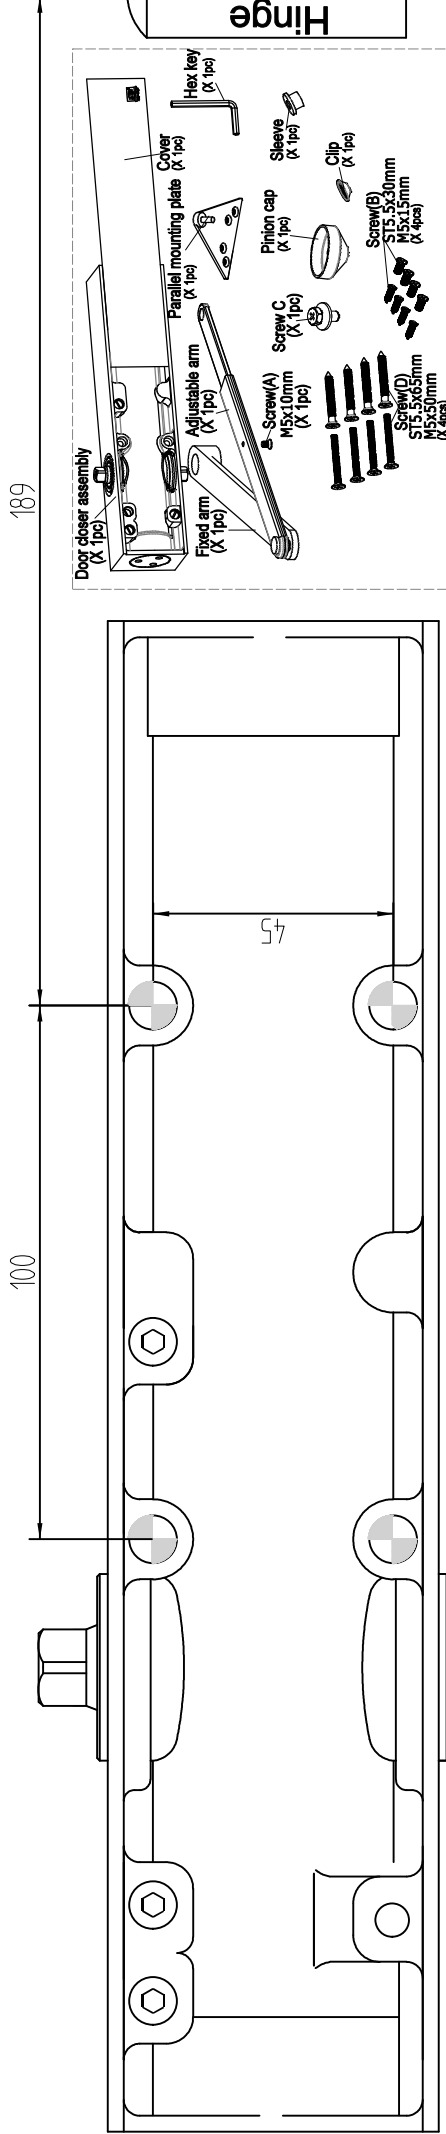


1 - Fit template to door, mark holes then remove template.

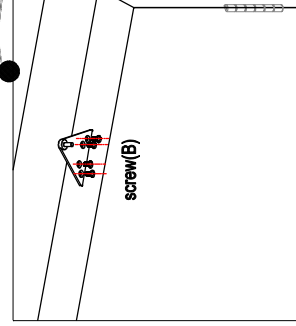


2 - Fit Parallel arm mounting plate to frame using 4-off screws(B).

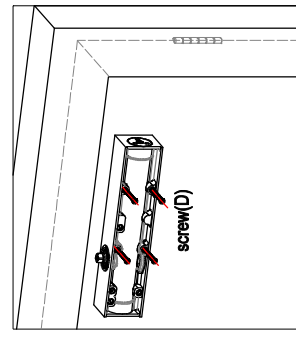


3 - Fit body to door face using 4-off screws(D). Use spirit level to get body parallel to door frame.

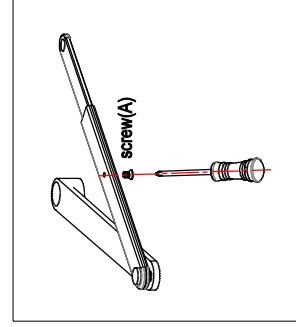


4 - Remove screw(A) from adjustable arm and take sliding part out.

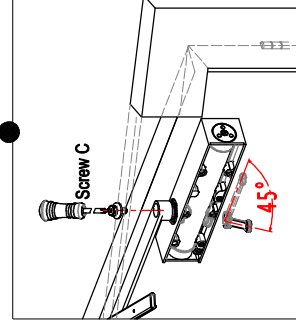


5 - Use spanner to turn pinion 45° for pre-load. Hold pinion in tension while fitting fixed arm parallel to door face. Use screw C to fix arm to body.

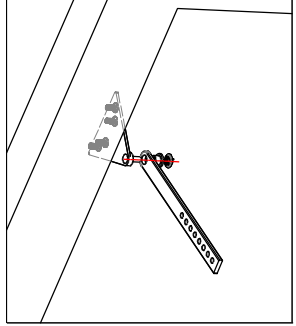


6 - Assemble adjustable arm, parallel arm mounting plate, sleeve and clip together.

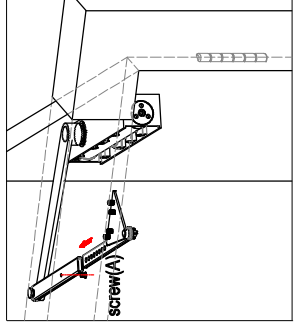


7 - Move fixed arm to meet adjustable arm. Slide adjustable arm inside the channel. Keep adjustable arm parallel to door face and tighten screw(A) to lock sliding arm in place.

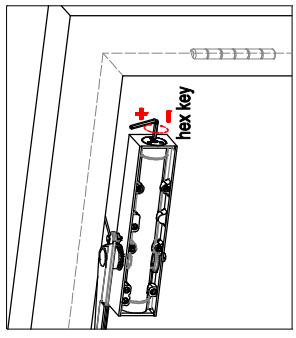

8 - According to door details (see table at side of template), adjust the closer power with hex key.

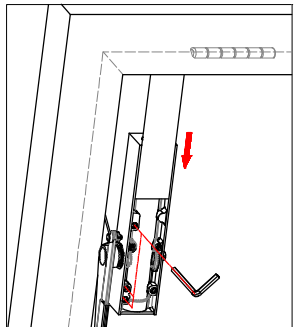

9 - Use hex key to adjust Speed and Latch valves and BC valves, assemble cover into body.

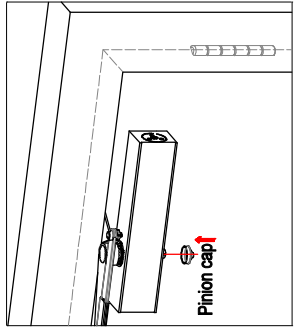

10 - Put pinion cap on body.

Tools required:
Screw driver
Spirit level
Spanner

SEVERE LIGHT/OFF (indicated with a minus sign and a crossed-out plus sign)
FAST SLOW (indicated with a plus sign and a crossed-out minus sign)

BACKCHECK
Closing speed
0°
15°
75°
120°

POWER ADJUSTMENT
2 3 5
Factory Preset Cx18

EN1154
850mm(10kg)
950mm(10kg)
1100mm(10kg)
1250mm(10kg)
1400mm(120kg)

Factory Preset at 3